

User's Manual- Installation and Operation

Important Safety Information

- Always turn off the main power when the plastic cover of the thermostat is removed.
- Read carefully the information included in this manual before install for operation the thermostat.
- The used power is the main power of 230Volts AC/50Hz and the installation should be done by authorized person.
- Avoid places of high humidity for the installation.
- Do not try to use the thermostat for other applications except those that is made to be used i.e. central heating
- This thermostat is not an instrument. It must not be used in life critical applications.

Features

- The sensitivity of the thermostat depends on the ability to display in the temperature spectrum of +5 °C to +40 °C.
- Adjustable from +5 °C to +40 °C.
- Displays "Lo" and "Hi" indication when temperature reaches the lower or the upper limit.
- Temperature can be adjusted in steps of 0.1 °C.
- The accuracy is within ±1°C.
- Memory is available in case power failure.
- Contains light indicators for "SET", "ON/OFF", and "ORDER" conditions.
- Incorporates variable differential and sensed temperature trimming function (for installers only).

Installation

Install the thermostat always in an inside wall in a height of 1.2m to 1.5m from the floor and away of corners, room places affected of heat generating appliances, air vents or places directly exposed to sunlight. All above reasons may affect the correct thermostat operation.

- Turn OFF the power of the heating system.
- Remove the plastic cover of the thermostat simply by pressing the two anchors in both lateral sides.
- Place thermostat against the wall at desired location. Make sure the wires will feed through opening on its base.
- Mark the position of mounting holes and drill them.
- Secure and align the thermostat in the wall by fixing the two screws. Do not over tighten the screws.
- Connect the appropriate wires to cable terminal strip as shown in the wiring diagram.
- Replace the plastic cover.
- Switch ON the power of the heating system.

Operation

When the installation is accomplished the thermostat operates as a digital thermometer. Press the "ON/OFF" button. A green indicator lights on. Repressing the same above "ON/OFF" button the thermostat goes OFF. Adjustment of the desired temperature when thermostat is ON is made by pressing either the button signed with Δ or ∇ symbols. A yellow colored indicator lights on and the display shows the desired temperature. Once the desired temperature is set up correctly the thermostat affects the heating system in order to maintain the temperature as close as possible into the setting. When the room temperature is lower than the desired the red indicator lights on and the electrical contact is closed. When the room temperature exceeds the desired point the red indicator is switched off and the electrical contact opens.

The thermostat has a factory preprogrammed differential of 0.6 °C which is well suited for home heating applications. The temperature differential can be adjusted from -0.2°C to +1.0°C. Differential adjustments must be done exclusively from authorized personnel. Incorrect adjustment has serious danger and may affect the correct operation as well as the stability of the system. For the same reason take care when performing trimming to improve sensed temperature accuracy. This adjustment is also allowed to experienced installers only. Refer to Charmeg for detailed trimming procedures.

This product has been manufactured from materials which can be recycled and reused according to the European Directive 2002/96/EC. Please be informed regarding the local collection system for electrical and electronic equipment and do not dispose the old products with your normal household waste.

The correct disposal of the products will help to prevent the negative consequences of the environment and human health.



Technical Characteristics

Physical dimensions	110x62x31mm approx.
Mains power	~230V AC/50Hz ±10%
Electrical contact rating	5A/250VAC 5A/30VDC
Adjust limits	+5 °C to +40 °C
Differential	-0.6°C(-0.2°C to +1.0°C for authorized personnel)
Sensed temp. trimming	-2.9 °C to +3.0 °C (for authorized personnel)
Operating temperature	-10°C to +50°C



